



DEMAND MORE

Intex Technologies (India) Ltd.

*E-mail(Corporate) configuration Procedure for
iSmart*



DEMAND MORE

Basic requirement to configure Corporate E-mail.

1. SIM should be GPRS activated.
2. User's correct E-mail ID and Password .



DEMAND MORE

Step 1: Goto Menu > Email>Email Account>Options>New Account
> ok (Start to create Account)>Yes.

Step 2: E-mail ID (example: xxxxxxx@yyyyyyyyyyy.com/complete mail ID) >Next
> POP3(protocol) >Next.

Step 3: Data Account (Select GPRS SIM-operator profile)>Options>Edit
(choose SIM-1/2)>GPRS>choose GPRS SIM-operator profile>
Options>Next.

Step 4: Incoming Server (example: mail.yyyyyyyyyy.com) >Options>Next
>Outgoing Server (example: mail.yyyyyyyyyy.com) >Options>Next.

Step 5: User Name (example: xxxxxxx@yyyyyyyyyyy.com/complete mail ID)
>Options> Next>Password(User E-mail ID P/W >Option>Next.



DEMAND MORE

Step 6: Account Name (example: mail.yyyyyyyyyy.com) >Options>Done
>Option>Edit>Display Name (as per user wish-example: Intex) >Ok.

Step 7: Advance Settings>Account settings>Keep all as it is.

Step 8: Outgoing Port – 25,Authentication – ON > Done >Yes.

Step 9: Incoming Port–110,Download Option–All,Copy on Server
–ON,Delete Server mail--OFF >OK>Yes>Back>Done>Yes
>Activate.

Note : Now you are able to Browse YOUR E-mails.
(*goto E-Mail and select Send and receive>ok*) .